

Stall mat cleaning and maintenance

Heads up — Farm & Barn Rubber stall mats must not be cleaned with any petroleum based cleaners. If any petroleum fuels are spilled on the matting, it should be removed immediately to avoid damage to the matting and voiding of warranty.

Initial cleaning after installation

- For interlocking or loose laid mats, initial cleaning can be performed immediately after installation.
- Sweep and vacuum mats to remove all loose dirt and debris.
- Apply approved floor cleaner diluted with clean water, as per manufacturer's instruction, using a mop. While still wet, scrub floor using a rotary buffing machine equipped with a medium Scotch Brite® pad.
- Work in small areas of floor at a time.
- After scrubbing, remove wet residue using a wet-dry vacuum.
- Damp mop floor with clean water to rinse and repeat wet-dry vacuum.
- Repeat cleaning as required to remove any remaining mold release or sediment.
- Prohibit foot traffic on flooring until area is dry.

Floor finishing

- A finish may alter the surface characteristic of the mat.

Regular maintenance

- Mats may be cleaned at any time using a damp mop with a pH neutral cleaner diluted with water.
- Ensure that any moisture is immediately extracted after cleaning.

Precaution

- Mats must not be cleaned with any petroleum based cleaners. If any petroleum product is spilled on the matting, it should be removed immediately to avoid damage to the matting and voiding of warranty.

Protection

- Protect and cover new floors from damage until final inspection.
- If adhesive is used, prohibit traffic on floor for 24 hours after installation.
- If adhesive is used, provide ventilation to installation area during installation and for minimum 72 hours after completion of work.